

Tips on Setting up your Wine Cooler

- Do not place the wine cooler under direct sunlight, or in a hot (i.e. - above 25°C) area or in a humid place (frost will form). Likewise, keep it out of an area that will get very cold as very cold conditions will prevent your Wine Cooler from keeping your wine at the temperature you want.
- Make sure your wine cooler is resting on a flat surface so that there is no risk of bottles being able to tip forward. Note that your Wine Cooler has adjustable feet so you can

adapt your Wine Cooler to your floor surface. Turning the feet clockwise will raise the height of the unit. Turning them anticlockwise will lower the height.

- Remove all exterior and interior packaging, including protective foam on the door panels. Remember that children are particularly vulnerable to packaging materials and old appliances - discard materials with this in mind.
- Check to be sure the following parts are included:
 - ✓ 6 slide out shelves
 - ✓ 1 instruction manual

Your Wine Cooler needs space around it to function properly. It is very important that you give it at least 10cm between the back and any surface behind it as well as 5cm between the sides and any surfaces around them. This is necessary so that your Wine Cooler has adequate space for ventilation.

- You can replace the shelves with wooden ones (BW24KIT - holds 24 bottles), if desired. This is available as an optional extra.

Using your Wine Cooler :



1) Connecting

- ✦ First, connect the power.
- ✦ Find a suitable power outlet and make sure that your voltage is the same as what is shown on your Wine Cooler's rating label.

2) Power

- ✦ When you connect the power, your Wine Cooler will start working.
- ✦ To turn the interior light on, press the switch on the top right hand corner just inside your Wine Cooler's door.

3) Adjusting the Temperature.

- ✦ You can adjust the interior temperature of your Wine Cooler by using the temperature adjustor on the upper side of the inside cabinet. 'High' increases the

temperature; 'Low' reduces it.

- ✦ Interior temperature adjustment ranges from 10-18°C (50 - 64.4°F), although colder temperatures can be achieved on the lower shelves (about 8°C). When the interior temperature reaches the pre-set temperature, it will be kept at that. There is no thermostat as the semiconductor system maintains itself. The extractor fan withdraws air and re-circulates it through the main fan below it.

4) Cooling Speed.

- ✦ The interior temperature of your Wine Cooler can reach 15°C (59°F) in about one hour.

5) Remember the character of your wine choice.

It's good to keep your red wines on the higher racks, and white, rosé, sparkling wines and champagne on the lower racks.

6) Storing your Wines

- ✦ After 1-2 hours of working, the inside cabinet will be properly cooled, allowing you to store your wines. Please allow your Wine Cooler this time to cool before storing your wines.